


Vacuum valve disassembly and cleaning instructions


Carefully remove the 4 socket head screws.



Lift the 3 piece assembly away from the spinner using great care not to lose the small face o ring.

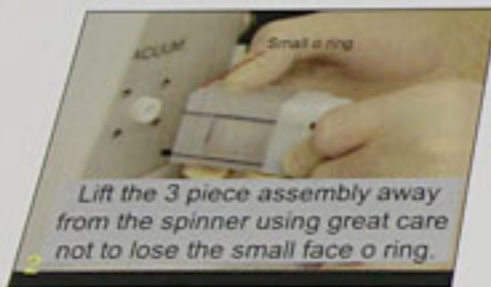

The main assembly consists of 3 pieces and 3 small orings

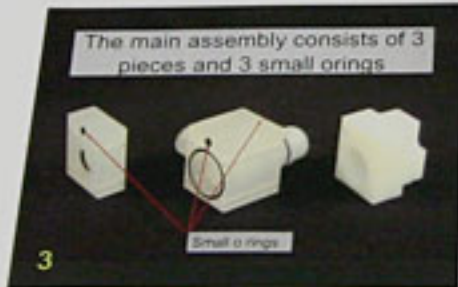

Backside view of the 3 piece assembly



It is not always necessary to disassemble the valve for cleaning. The valve can be soaked as a whole unit.



If you decide to disassemble the valve, first remove the bell screw.

