

Power Conditioner Instructions

1. Make sure that the conditioner is set to the correct output voltage.

2. Make sure that the correct fuse is fitted to the conditioner as per the instructions.

